

Stringer Topo Keyboard Shortcuts

EDITING / CLEANING STRINGS		
SHORTCUT	COMMAND	DESCRIPTION
SJAC	Create Survey Strings	Build survey strings from COGO points automatically.
SDS	Delete Segment	Remove an individual segment from a picked survey string.
SM	Manual Join String	Re-order a survey string manually
SSS	Split by Distance	Break a string into equal segments by user-defined distance.
SSA	Split All by Distance	Apply the split-by-distance operation to every string in the current point group.
STE	Embed Code	Insert a code into a survey string at a specific point.
SJS	Join Strings	Merge two existing survey strings.
STJC	Join Strings Create	Force-create a join between two strings by generating a new join code.
SAC	Append Code	Copy the Code from a source point and append to a target point (multi code)
SMCP	Match Point Code	Copy the code from a source point and apply to a target point
SRDN	Reorder Distance to Next	Reorder string connections to points by picking a new start point. String connections are then made to the next nearest point
SAI	Reorder by AI	Pick a Start point for a String and reorder using AI
SRV	Reverse String	Flip the direction of a string
SRS	Reset String	Restore a string's point order back to original numbering.
SCL	Close String	Close a string from last point back to first point
SFC	Fit Curve	Fit a curve from the first point through the next two points and then to each point thereafter
STC	Fit Tangential Curve	Fit a curve from the first point to the next point using the direction of the previous string segment, and then to each point thereafter
SSL	Straight Lines	Create survey strings in a straight-line point to point
SSR	Rectangle	Form a rectangle using three points
SPR	Remove parameter	Remove any string parameter on the point
SSRM	Add Rectangle to multiple	Mark 3-point strings of a given code as rectangles
SCLM	Add Close to multiple	Mark strings within a point-count range as closed polygons
SLEG	Legend Table	Generate a CAD table legend for survey string styles in the drawing.
POINTS		
SHORTCUT	COMMAND	DESCRIPTION
SSPE	Edit Point	Edit a single COGO point's properties and codes
SMPT	Create Point	Create a new COGO point.
SPD	Property Display	Edit Property Display for COGO points.
STQB	Quadrant Bearing	Create COGO points using quadrant bearing.
SCOMP	Inquire Points	Report details
SEPA	Edit Point Attribute	Modify custom attributes tied to individual points.
SESA	Edit String Attribute	Modify custom attributes tied to survey strings.
MANAGEMENT & UTILITIES		
SHORTCUT	COMMAND	DESCRIPTION
SUD	Regen Strings	Force regeneration of all survey strings in the drawing.
SMAN	Survey String Manager	Open the main manager dialog for survey strings.
SDTMOUT	Extract Surface and Points	Extract drawing entities from a surface.
SMV	Model Viewer	Launch the model viewer for visual inspection.
SIPF	Import Point File	Import external point files
SEK	Export KML	Export all survey points and strings from the current point group to Google Earth KML.